


[FTY45E, 60E]

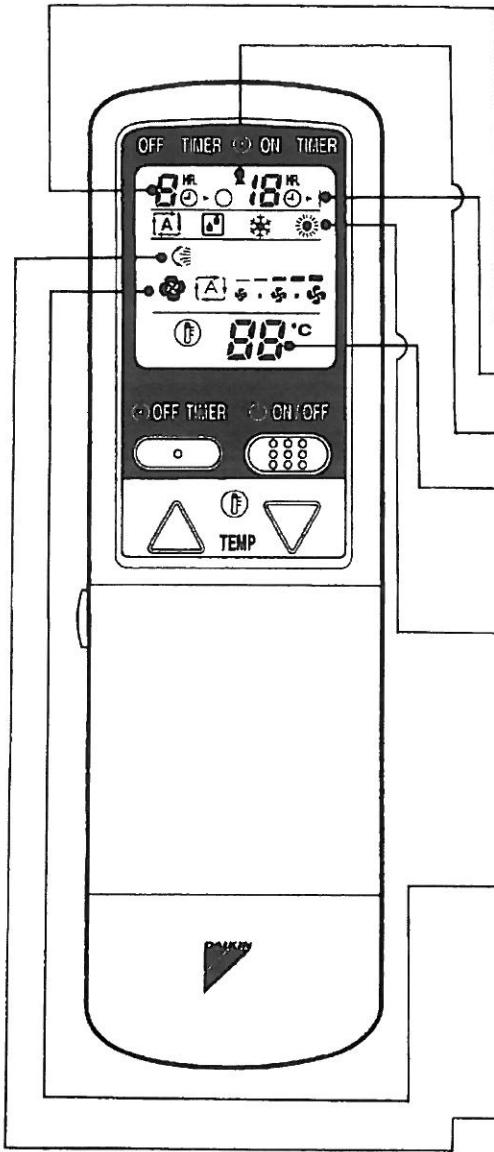

Once the operation mode has been set, it is memorized by the computer. From then on, it can be used by simply pressing the ON / OFF button. Note, however, that the memory is deleted when the batteries are replaced.

In this illustration, each section is shown with all its displays ON for the purpose of explanation. But when in use, only the relevant displays will be ON.

This is displayed when TIMER OFF is used.

This is displayed when TIMER ON is used.

This is displayed when signals are transmitted.

This section displays the temperature setting.


This section displays the operation mode.

- [A] : AUTO
- [B] : PROGRAM DRY
- ❄️ : COOL
- ☀️ : HEAT

This section displays the air flow setting.

- [A] : AUTO
- : LOW
- — — — : HIGH

This is displayed when horizontal blades are swinging.

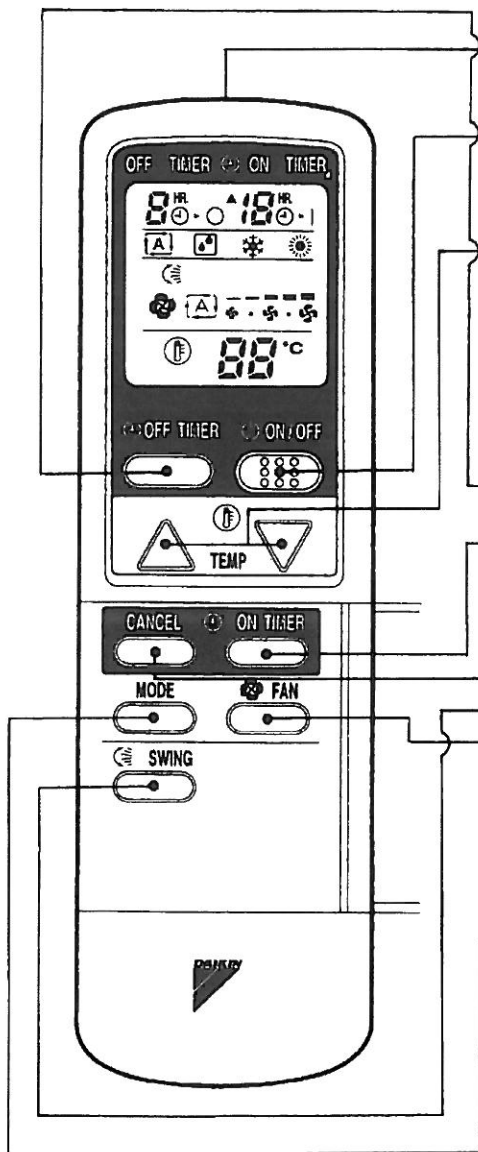

SIGNAL TRANSMITTER
Sends signals to the air conditioner.

ON/OFF button
Press once to start operation.
Press once more to stop operation.

ROOM TEMPERATURE ADJUSTING buttons
Use these buttons to set the room temperature as you like.

Temperature setting range:
COOL --- 18°C to 32°C
HEAT --- 14°C to 28°C
AUTO --- 18°C to 28°C

TIMER OFF SETTING button

TIMER ON SETTING button


TIMER CANCEL button

SWING button

AIR FLOW ADJUSTING button
Five choices are available for air flow setting.
In "AUTO", the computer changes the air flow automatically according to the room temperature.

OPERATION MODE SELECTOR button

Note
Display monitor function:
You can check or change settings when the air conditioner is stopped. To check, press once the button for the setting you are checking.
To change the setting, press the same button again while the display is ON.

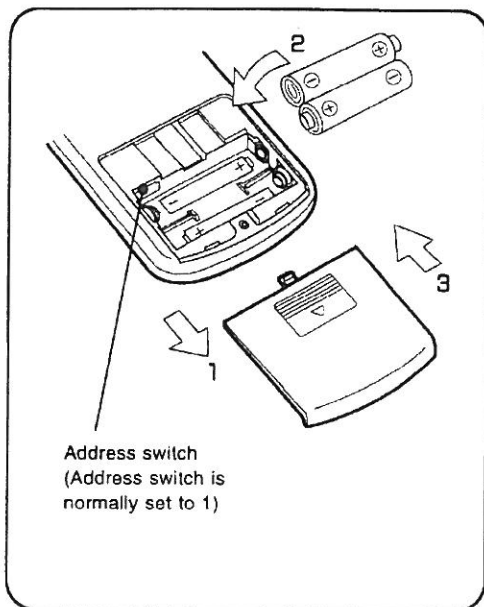

< Setting dry batteries >

1. Slide the back cover of the remote controller in the direction of the arrow and take it off.
2. Set two dry batteries in accordance with the indications of (+) and (-).
3. Set the back cover as before.

Notes on batteries

- Replace the batteries with new ones when, on pressing a button, the display shows all figures and letters at the same time and no signal communication takes place.
- Use two LR03 (AAA) batteries.
- Never mix new and old batteries or different types of batteries.
- Never try to charge the batteries.
- Used-up batteries must be taken out all at once and treated correctly.

Address switch

Address switch is used for the installation of 2 units in one room. Contact the shop you purchased this DAIKIN room air conditioner if you would like to have 2 units/room. A unit will not be able to receive signals from a wireless remote controller when the address switch is set to 2. Be sure that it is set to 1.