


4. ARC417 Series

ARC417A1, A5, A11

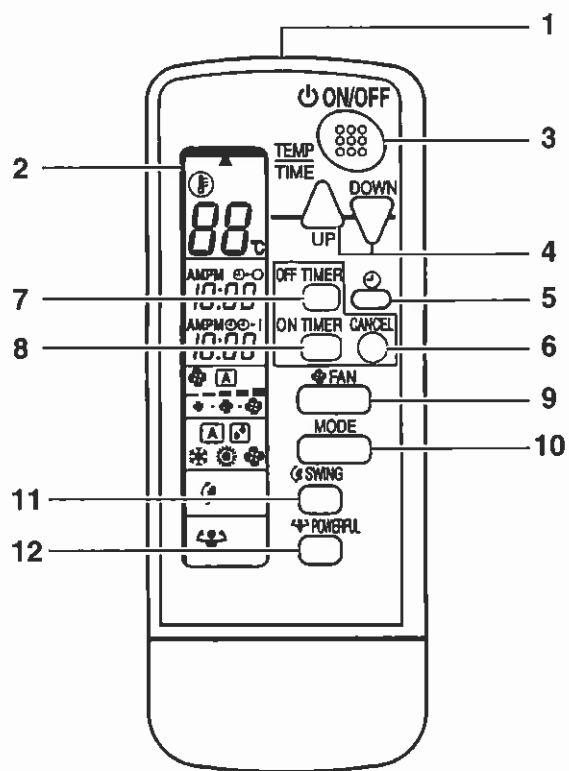

1. **Signal transmitter:**
 - It sends signals to the indoor unit.
2. **Display:**
 - It displays the current settings.
(In this illustration, each section is shown with all its displays ON for the purpose of explanation.)
3. **ON / OFF button:**
 - Press this button once to start operation.
Press once again to stop it.
4. **TEMPERATURE adjustment button:**
 - It changes the temperature setting.
5. **CLOCK button**
6. **TIMER CANCEL button:**
 - It cancels the timer setting.
7. **OFF TIMER button**
8. **ON TIMER button**
9. **FAN setting button:**
 - It selects the air flow rate setting.
10. **MODE selector button:**
 - It selects the operation mode.
A1, A5 : DRY / COOL / FAN
A11 : AUTO / DRY / COOL / HEAT
11. **SWING button:**
 - Flap (Horizontal blade)
12. **POWERFUL button:**
 - for POWERFUL operations
A1 : Auto-off
A5, A11 : Continuous

