


## ARC417A3

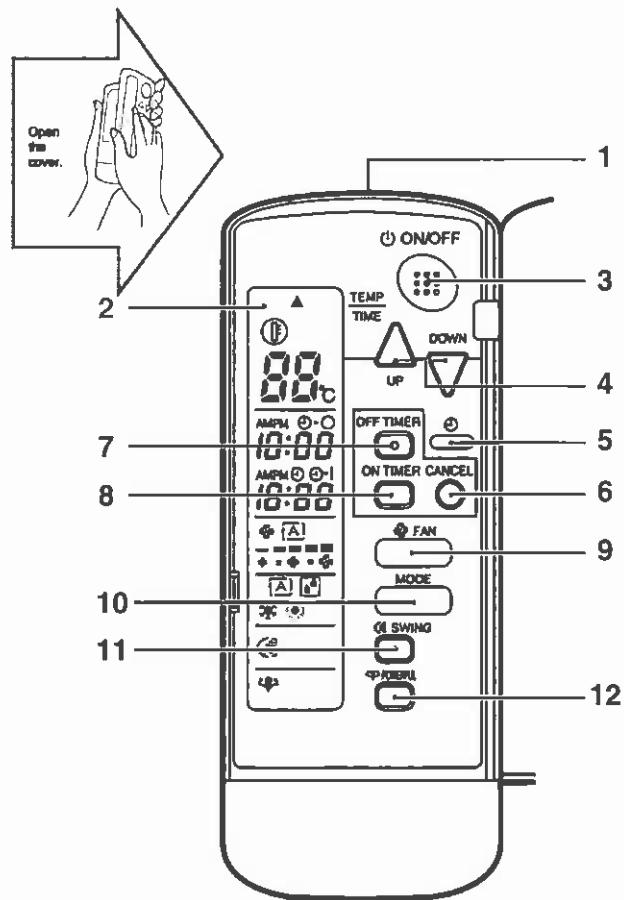

- 1. Transmitter**  
■ It sends signals to the indoor unit.
- 2. Display**  
■ It displays the current settings.(In this illustration, each section is shown with all its displays ON for the purpose of explanation.)
- 3. ON/OFF button**  
■ Press it once to start operation.  
To stop it, press it once again.
- 4. TEMPERATURE adjustment buttons**  
■ It changes the temperature setting.
- 5. CLOCK button**
- 6. TIMER CANCEL button**  
■ It cancels the timer setting.
- 7. OFF TIMER button**
- 8. ON TIMER button**
- 9. FAN setting button**  
■ It selects the air flow rate setting.
- 10. MODE selector button**  
■ It selects the operation mode.  
(AUTO/DRY/COOL/HEAT)
- 11. FLAP SWING button**
- 12. POWERFUL button**

#### Unit operation panel and display panel

