



(V0306)

## NAMES AND FUNCTIONS OF THE OPERATING SECTION

①	<b>DISPLAY "▲" (SIGNAL TRANSMISSION)</b> This lights up when a signal is being transmitted.	⑭	<b>AIR FLOW DIRECTION ADJUST BUTTON</b>
②	<b>DISPLAY "❄️" "☀️" "A" "❄️" "☀️" (OPERATION MODE)</b> This display shows the current OPERATION MODE. For straight cooling type, "A" (Auto) and "☀️" (Heating) are not installed.	⑮	<b>OPERATION MODE SELECTOR BUTTON</b> Press this button to select OPERATION MODE.
③	<b>DISPLAY "20.0" (SET TEMPERATURE)</b> This display shows the set temperature.	⑯	<b>FILTER SIGN RESET BUTTON</b> Refer to the section of MAINTENANCE in the operation manual attached to the indoor unit.
④	<b>DISPLAY "3:00" (PROGRAMMED TIME)</b> This display shows PROGRAMMED TIME of the system start or stop.	⑰	<b>INSPECTION/TEST OPERATION BUTTON</b> This button is used only by qualified service persons for maintenance purposes.
⑤	<b>DISPLAY "▲" (AIR FLOW FLAP)</b>		
⑥	<b>DISPLAY "4" (FAN SPEED)</b> The display shows the set fan speed.		
⑦	<b>DISPLAY "TEST" (INSPECTION/TEST OPERATION)</b> When the INSPECTION/TEST OPERATION BUTTON is pressed, the display shows the system mode is in.		
⑧	<b>ON/OFF BUTTON</b> Press the button and the system will start. Press the button again and the system will stop.		
⑨	<b>FAN SPEED CONTROL BUTTON</b> Press this button to select the fan speed, HIGH or LOW, of your choice.		
⑩	<b>TEMPERATURE SETTING BUTTON</b> Use this button for SETTING TEMPERATURE (Operates with the front cover of the remote controller closed.)		
⑪	<b>PROGRAMMING TIMER BUTTON</b> Use this button for programming "START and/or STOP" time. (Operates with the front cover of the remote controller opened.)		
⑫	<b>TIMER MODE START/STOP BUTTON</b>		
⑬	<b>TIMER RESERVE/CANCEL BUTTON</b>		
			(NOTE) • For the sake of explanation, all indications are shown on the display in Figure 1 contrary to actual running situations. • Fig. 1-2 shows the remote controller with the front cover opened.

(V0309)

**B72A414 (3/3)**  
(KY16041A)