



3. ARC416 Series


ARC416A

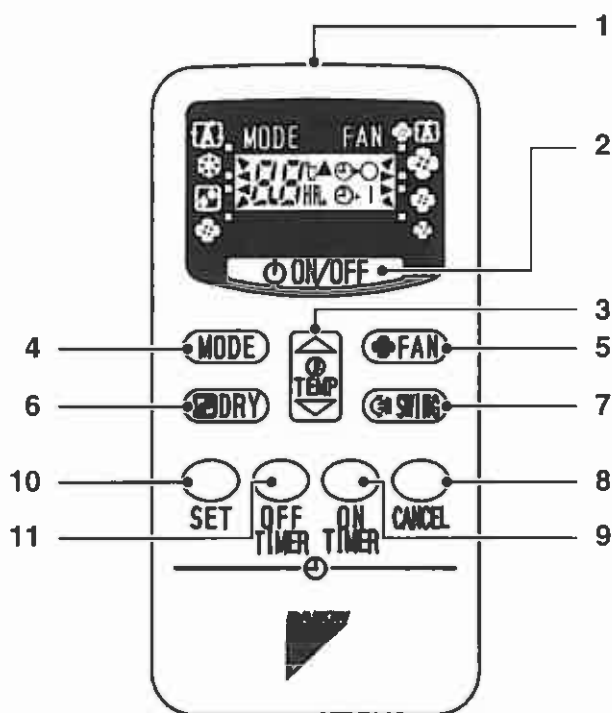

The operation mode is shown with the following symbols

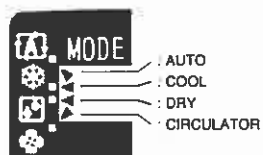

The airflow setting is shown with the following symbols.

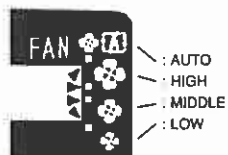

1. SIGNAL TRANSMITTER

- Send signals to the air conditioner.

2. ON/OFF button

- Press once to start operation.
- Press once more to stop operation.

3. ROOM TEMPERATURE ADJUSTING buttons

- Use these buttons to set the room temperature as you like.

Temperature setting range:
16°C - 32°C

4. OPERATION MODE SELECTOR button**5. 3-STEP AIR FLOW ADJUSTING button****6. DRY MODE SELECTING button****7. SWING button****8. TIMER CANCEL button****9. Time adjusting button (OFF TIMER)****10. ON/OFF TIMER SET button****11. Time adjusting button (ON TIMER)****Note:**

Display monitor function :

You can check or change settings when the air conditioner is stopped. To check, press once the button for the setting you are checking. To change the setting, press the same button again while the display is ON.

Unit operation panel and display panel

