



OWNER'S MANUAL

MagIQtouch Controller





Hello and congratulations on purchasing a MagIQtouch Controller for your home!

The MagIQtouch Controller is a versatile and intelligent Controller that can be used with a range of products from Seeley International. Please refer to the relevant sections in this manual as well as the owner's manual provided with each of your products for information on how to set-up and operate your system.

TABLE OF CONTENTS

GENERAL TIPS	3
QUICK START	4
OPERATION	10
NAVIGATION	10
SIMPLE DISPLAY	13
MANUAL MODE	14
PROGRAM MODE	15
SETTINGS MENU	23
GENERAL MENU	25
COOLER & HEATER MENUS	26
About Appliance	26
Min / Max Set Temperature	27
Night Quiet Mode	28
Status Information Display	28
SERVICE MENU	29
WARNINGS & SERVICE MESSAGES	30
SLAVE CONTROLLERS	32
POWER OUTAGES	33
TROUBLE SHOOTING	33

GENERAL TIPS


- Mount the MagIQtouch Controller in a room you want climate controlled. Ideally it should be positioned 1.5m (5') from the floor and away from any other heating or cooling sources.
- Ensure the MagIQtouch Controller is not exposed to direct sunlight as this will impact the temperature reading.
- Ensure any cable routing holes in the wall behind the MagIQtouch Controller are blocked as drafts can impact the temperature reading.
- Avoid blocking or restricting the vent holes located in the side of the MagIQtouch Controller, as this is where the thermostat is located.
- Ensure the plug is properly located into the socket located in the rear of the MagIQtouch Controller before mounting it.
- Do not use harsh chemical cleaners to clean the touch screen. For best results use distilled water or a touchscreen specific cleaning agent with a microfibre cloth.

QUICK START

Here's a brief visual guide to get you started quickly!
Continue reading for detailed instructions.

STEP 1

Activate screen.

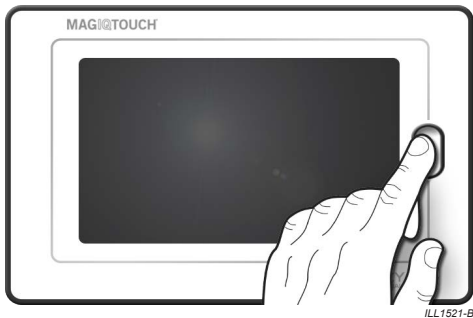

QUICK START cont

STEP 2

Select mode from lower taskbar.



ILL1523-B



ILL1524-B


QUICK START cont

STEP 3

Turn on cooler or heater.



ILL1525-B

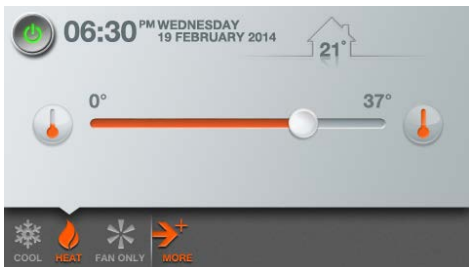

ILL1526-B


QUICK START cont

STEP 4

Set desired temperature.



ILL1527-B

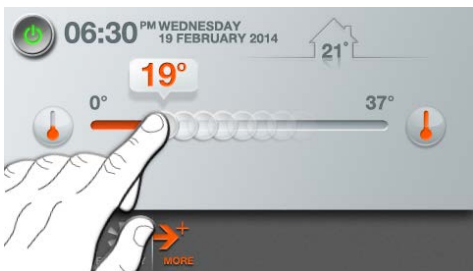


ILL1528-B

QUICK START cont

STEP 5

Access more advanced options by expanding the lower taskbar.

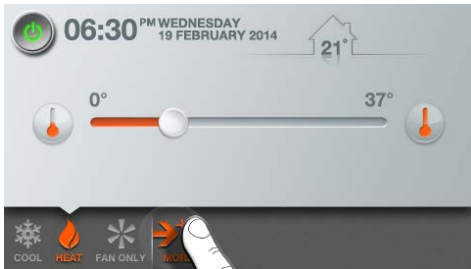

ILL1529-B




ILL1530-B

QUICK START cont

STEP 6

Access wall control and system settings in the SETTINGS menu.

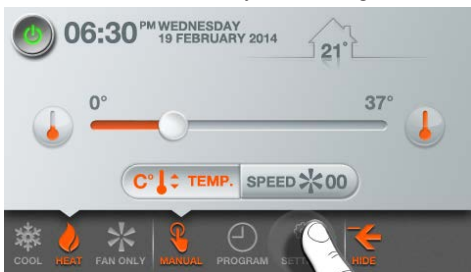

ILL1531-B



ILL1532-B


OPERATION

NAVIGATION

There are a few things you might need to know in order to navigate your new MagIQtouch Controller.


If you are unfamiliar with touch screen technology, the following section outlines some of the sliders and buttons you will need to use throughout the interface.

Slide for quick temperature adjustment:

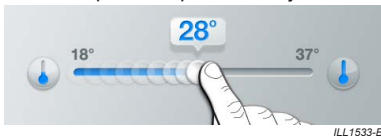

ILL1533-B

Tap for incremental adjustment or press and hold:

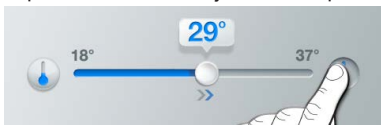

ILL1534-B

Slide on and off:




ILL1535-A

OPERATION cont

NAVIGATION cont

Press mode option buttons:

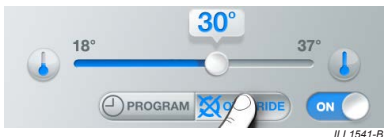

Make your selection(s):



The header is the top section of your screen. This is where, most importantly, you'll find the on/off button for your system.



The lower taskbar is the section at the bottom of the screen. This is where you'll be able to select your primary mode (cool, heat or fan only). Just be aware that you'll only see icons that are relevant to your installation as the MagIQtouch Controller knows what it's attached to.



OPERATION cont


NAVIGATION cont

The lower taskbar can be expanded to reveal more advanced control options. Here you can choose to operate manually or with a 7 day program. You can also access the settings menu for more options again.



ILL1540-A

The **operating space** in between will change depending on what mode you have selected.

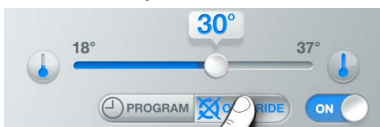

ILL1541-B




ILL1542-A

OPERATION cont

SIMPLE DISPLAY

There is no need to display advanced functionality if it is not required. In simple display you can set your mode and temperature and let the MagIQtouch Controller do the rest.

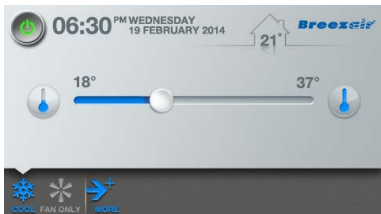

ILL1543-B



ILL1527-B

Note! In the case of a heater, the temperature slider will change to dark grey (fan running) to orange (gas and flame present).

OPERATION cont

MANUAL MODE


If you want full minute-to-minute control of your system, use MANUAL mode.

An evaporative cooler running in Manual TEMP mode will try to maintain the temperature you want by speeding up or slowing down the fan.



ILL1544-B

Alternatively, using Manual SPEED mode, you can choose to disregard the room temperature and keep the cooler running at a constant fan speed.

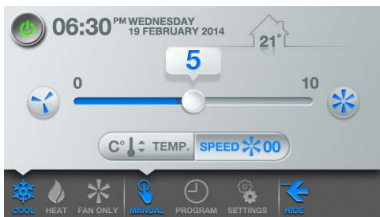

ILL1895-A

Gas ducted heaters and add-on coolers, however, work differently. In un-zoned installations you can control both the temperature and the fan speed limit simultaneously.

OPERATION cont



ILL1545-B

Note! In zoned installations with more than one temperature sensing device, fan speed is automated and so will not appear on your screen.

PROGRAM MODE

If you like routine and want to “set and forget” a seven day program that suits your lifestyle, activate PROGRAM mode. PROGRAM mode divides each day into four time periods. You decide when each of these periods begins and what you want your system to be doing.




ILL1546-B

OPERATION cont

PROGRAM MODE cont

Program mode is flexible.

If you leave or arrive home early, you can easily skip forwards to the next period. The program will take over again once the next time period begins.

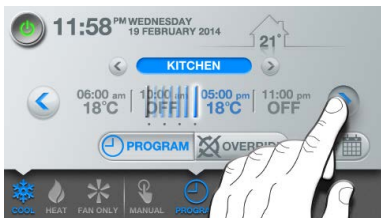

ILL1547-B



ILL1548-B

OPERATION cont

PROGRAM MODE cont

Or perhaps you want to make the temperature higher without permanently changing your program. The **OVERRIDE** button will allow you to temporarily change what's been set by the program until the next time period begins.



ILL1549-B

OPERATION cont

PROGRAM MODE cont

To set up a program first press the EDIT button on the PROGRAM home screen.



ILL1550-B

This will take you to a program overview screen where you can tap each day to see what's been set.



ILL1551-A



ILL1552-A

OPERATION cont

PROGRAM MODE cont

If your system has zones, you'll see each zone listed in rows. Just scroll up and down to view them all.



ILL1553-A

To set-up or change a time period, touch the time period and an adjustment screen will appear



ILL1554-A

OPERATION cont

PROGRAM MODE cont

Turn the system on or off.



ILL1556-B

Adjust the start time.



ILL1558-A

Adjust the set temperature.



ILL1559-A

OPERATION cont


PROGRAM MODE cont

You can even link days together so you only have to make the adjustments once.



ILL1560-A

Then save your changes and you're done.

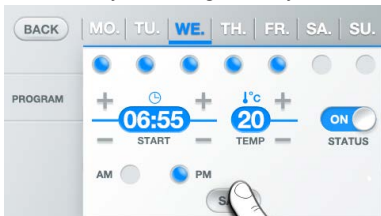

ILL1561-A

OPERATION cont

PROGRAM MODE cont

Now you can review what you've done and select another time period.



ILL1562-A

Or if you're done, press BACK to return to the program home screen.



ILL1581-B

SETTINGS MENU

The SETTINGS menu contains extra options. There are general settings for your MagIQtouch Controller and the system as a whole. You'll also find individual menus for the product(s) you have installed. At the end is a menu for service agents, to help them help you.




ILL1563-B

Note! The MagIQtouch Controller will only display the menus and menu items that are relevant to your system. What you see in this document may not be exactly the same as what you see on your screen.

Navigate through the menus by tapping the heading tabs at the top of the screen.



 ILL1564-A



ILL1565-A

SETTINGS MENU cont

All the menu items are listed on the left hand side of the screen.



ILL1566-B

The current status is listed on the right, close to the arrow buttons.



ILL1567-B


If you want to change a setting or access a menu item, press the arrow button.



ILL1568-B

SETTINGS MENU cont

There are some settings that are just for trained service agents or installers. You won't be able to access any of these options without a pin code.

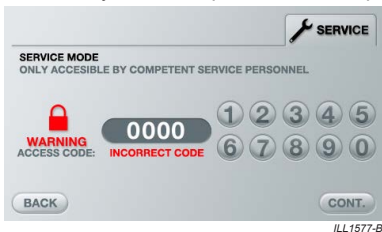

GENERAL MENU

The GENERAL menu includes settings or information related to your MagIQtouch Controller, or the system as a whole.

- Time and Date
- Language
- °C / °F (temperature unit)
- Child Access Lock (set a pin to restrict access)
- Standby Screen Brightness (adjust standby screen brightness)
- Zone Renaming* (personalise your zone names)
- Status Information Display (for diagnostics)
- Software Revision (for diagnostics)
- Simple Mode Lock (lock screen to simple display)
- Shutdown Timer

* Only available for zoned installations.

SETTINGS MENU cont

COOLER & HEATER MENUS

The COOLER and HEATER menus include settings or information related to the specific Seeley International cooling or heating products installed within your system.

If you want to know more about the specific settings of your product, please refer to the separate owner's manual you received with it.

Here are some settings that are common to all cooling and heating products:

About Appliance

Access information about the appliances installed in your system.




ILL1570-B

SETTINGS MENU cont

Min/Max Set Temperature

You can change the minimum and maximum temperature displayed on your slider, depending on what temperature range you prefer your system to work within.

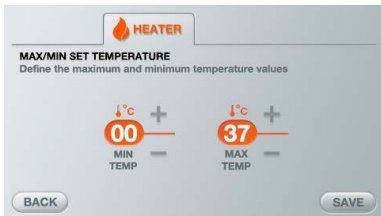

ILL1571-B




ILL1572-B

SETTINGS MENU cont

Night Quiet Mode

Restrict fan speed over the night time period for a quiet night's sleep.

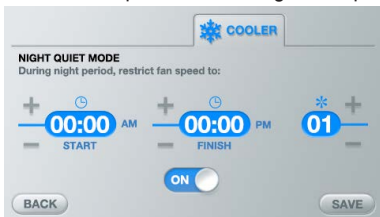

ILL1573-A

Status Information Display

When this option is turned on, a temporary information display window becomes accessible on all MANUAL and PROGRAM screens.



ILL1574-B



ILL1575-B


SETTINGS MENU cont

SERVICE MENU

The SERVICE menu contains information and functions for competent service personnel. Access is locked with a service pin code.



ILL1576-A

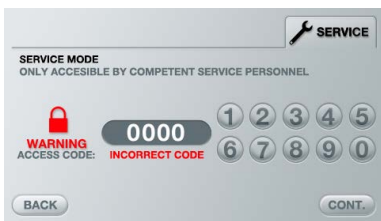

ILL1577-B

WARNINGS & SERVICE MESSAGES

Your MagIQtouch Controller will operate to make sure everything is as it should be. If it detects a change or a problem, it will notify you immediately.

Perhaps you've turned off the power to your cooler over winter. The MagIQtouch Controller will let you know it can no longer detect the cooler and will give you the option to reconnect the power and retry or to ignore it for now.



ILL1578-A

Once summer comes again and you power up your cooler, the MagIQtouch Controller will automatically detect the cooler and restore all functionality.

WARNINGS & SERVICE MESSAGES cont

If a service issue occurs, there are some features to help you resolve it as quickly as possible. Follow the screen prompts which will either help you fix the issue yourself or display information which will be helpful when you call your local service agent.



ILL1579-B



ILL1580-B

SLAVE CONTROLLERS

Multiple MagIQtouch Controllers can be used to control individual zones. In such installations there is always one “master controller” located in a nominated “master zone”. All other controllers become “slave controllers”.

In such systems certain principles that apply:

- If the master controller is set to OFF, no other zone can be turned on.
- If the master controller is set to ON, zones can be turned on and off from the slave controllers.
- The primary operating mode (HEAT, COOL and FAN ONLY) is dictated by the master controller and cannot be changed by a slave controller.
- The SETTINGS menu in a slave controller will only display options relevant for the applicable zone.

For Evaporative Cooling:

- Zoning does not apply. All zones will operate according to the temperature sensed in the “master zone”.
- The set temperature or fan speed can only be modified by the master controller.

For Gas Ducted Heating / Integrated Cooling:

- The secondary operating mode (MANUAL and PROGRAM) can be selected for each zone from the master and slave controllers.
- The set temperature is unique for each zone and is set from the controller located within the zone (either master or slave).
- No fan speed limit control is available. Fan speed is automatically controlled by the heater to achieve the set temperature.

POWER OUTAGES

After a power outage the MagIQtouch Controller will prompt you to enter the time and date.

If the AUTO RESTART option is switched ON in the general setting menu, the cooler or heater will automatically restart in the last mode it was running in before the outage, even before the time or date is set.

TROUBLE SHOOTING

Symptom	Cause	Action
The MagIQtouch Controller has no display.	The cable from cooler may not be fitted correctly.	Refit cable.
	Cable damaged or broken.	Replace cable.
The MagIQtouch Controller shows my cooler/heater is on, but I can't hear the fan working.	The set temperature has been achieved and the cooler/heater is in standby.	None required.
	The Controller is in PROGRAM mode and the current time period specifies the cooler/heater is "OFF".	Review the schedule via the EDIT button on the PROGRAM home screen.

Your MagIQtouch Controller may prompt you to call a service agent to resolve a service issue. If your Controller has only recently been installed, we recommend you call your local Dealer for support first. Otherwise, call the Service number on the back of this manual.



Warranty Service

Australia 1-300-650-644

For regions outside Australia:

Contact your local Dealer

seeleyinternational.com

MANUFACTURED BY: SEELEY INTERNATIONAL PTY LTD
112 O'SULLIVAN BEACH RD, LONSDALE SA, 5160. AUSTRALIA

IMPORTED BY: SEELEY INTERNATIONAL (EUROPE) LTD
*5 PAPPLEWICK LANE, HUCKNALL, NOTTINGHAM,
NOTTINGHAMSHIRE, NG15 7TN, UNITED KINGDOM*

SEELEY INTERNATIONAL (AMERICAS) LTD
*1202 NORTH 54TH AVENUE, BUILDING 2, SUITE 117,
PHOENIX, ARIZONA 85043, USA*

SEELEY INTERNATIONAL (AFRICA) PTY LTD
*6 WITTON ROAD, FOUNDERSVIEW SOUTH,
MODDERFONTEIN 1609, GAUTENG, SOUTH AFRICA*

It is the policy of Seeley International to introduce continual product improvement.

Accordingly, specifications are subject to change without notice.

Please consult with your dealer to confirm the specifications of the model selected.

MAGIQTOUCH

seeleyinternational.com